


Inleren IMET M880 Wave2


- 1**



Maak de ontvanger spanningsvrij en verwijder de 4 schroeven.
- 2**

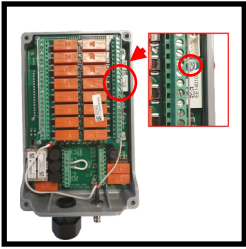

Verwijder de Eeprom.
- 3**

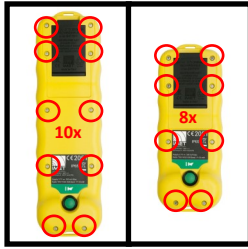

Open de zender.
Let op de lengte van de schroeven!
- 4**



Plaats de Eeprom in de zender.
- 5**




Plaats de batterij in de zender en de noodstop omhoog.
- 6**



Druk 1x op de startknop.
De oranje LED knippert 2x.
- 7**




Druk de noodstop in en verwijder de batterij.
- 8**

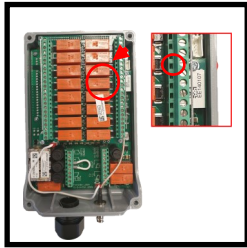

Plaats de Eeprom terug in de ontvanger.
- 9**



Sluit de ontvanger en voorzie van voeding.
- 10**

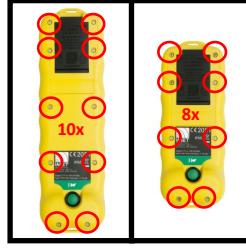

Sluit de zender.
Let op de lengte van de schroeven!
- 11**



Plaats de batterij in de zender en de noodstop omhoog.
- 12**



1x drukken op startknop.
- 13**




Groene LED knippert.
- 14**



Groene en oranje LED aan.
Wacht 7 minuten, de zender schakelt uit.
- 15**



1x drukken op startknop.
- 16**

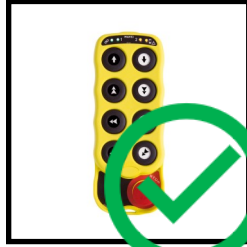

De zender is klaar voor gebruik.

Let op:


Zorg dat de originele zender uitgeschakeld is voor u de nieuwe zender inleerd.

Als de nieuwe zender is ingeleerd werkt de originele zender niet meer totdat deze opnieuw is ingeleerd. Er kunnen nooit 2 zenders tegelijk ingeleerd zijn.


- 1**



Disconnect the receiver from the power supply and remove the 4 screws.
- 2**

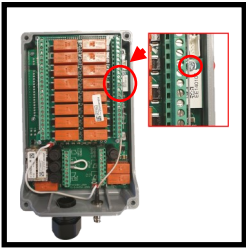

Remove the Eeprom.
- 3**

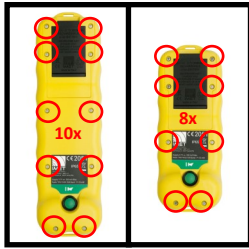

Open the transmitter.
Caution! The screws have different lengths.
- 4**



Place the Eeprom in the transmitter.
- 5**




Battery in the transmitter and emergency stop in up position.
- 6**



Push 1 time on the start button.
Orange LED blinks 2x.
- 7**




Emergency stop down and remove the battery.
- 8**

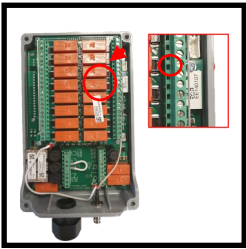

Place the eeprom in the receiver.
- 9**



Close the receiver and connect with power supply.
- 10**

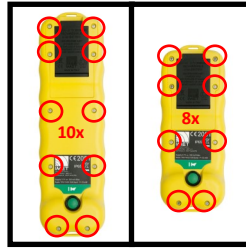

Close the transmitter.
Caution! The screws have different lengths.
- 11**




Battery in the transmitter and emergency stop in up position.
- 12**



Push 1 time on the start button.
- 13**




Green LED blinks.
- 14**

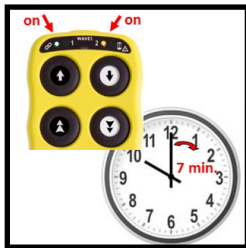

Green and Orange LED on.
Wait 7 minutes, the transmitter turns off.
- 15**



Push 1 time on the start button.
- 16**

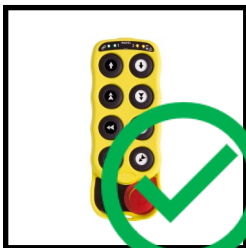

The transmitter is ready to use.

Note:

Make sure the original transmitter is switched off before teaching the new transmitter.

When the new transmitter is taught the original transmitter will no longer work until it is taught again. It is not possible to use both the transmitters at the same time.