

Quick start IMET M880 Wave2

1



Ontvanger voorzien van voeding.

Receiver equipped with power supply.

2



Batterij in zender.
Battery in transmitter

3




Noodstop uit.
Emergency stop off

4



1x drukken op startknop.
Push 1 time on the start button.

5

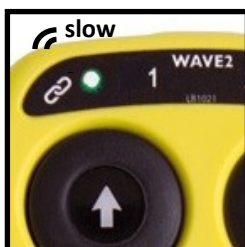

LED knippert langzaam.
LED blinks slowly.

6




LED knippert snel.
LED blinks fast.

7




1x drukken op startknop.
Push 1 time on the start button.

8

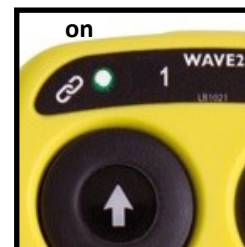

LED blijft aan.
LED stays on.

9

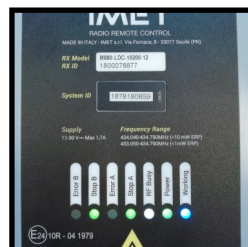

Zender verbonden.
Transmitter connected.